


**Fixing**

- Panels should be fixed using annular ring-shank nails or screws at the following intervals:
  - 4 fixings per joist on each short end.
  - 3 fixings per joist on each intermediate joist. **(Fig 2)**
- Fix flush or just below the panel surface.
- Where nailing could damage ceilings or joists, or where service access is required, panels should be fixed using countersunk posidrive No 8 screws into pre-drilled holes.

**Taping**

- Immediately after a run of panels have been fixed, all board joints, nail runs and exposed edges around the perimeter should be sealed using Caberfix tape. **(Fig 3)**. This operation should be carried out under dry conditions.

**(Fig 3)**

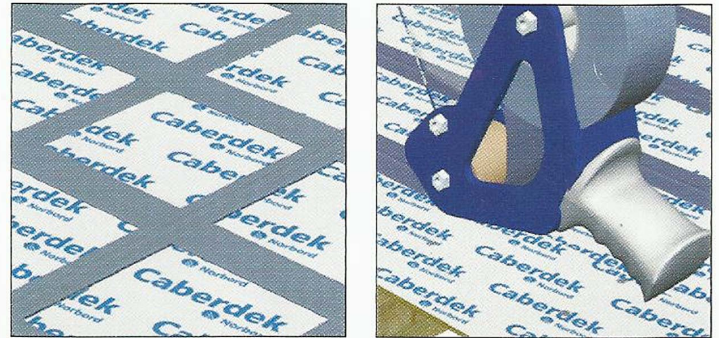

**(Fig 2)**

